

USER'S OPERATING MANUAL FOR PID DIGITAL TEMPERATURE CONTROLLER (Models: AI 7483 / 7883 / 7783 / 7983 / 7683)



SPECIFICATIONS : -

1. DISPLAY TYPE

: Dual 4- Digit 7 Segment LED
4 Digit Bright White (PV)
4 Digit Luminous Green (SV)

Model no.	AI-7483	AI-7783	AI-7983	AI-7683	AI-7883
Display height (PV)	0.36"	0.56"	0.80"	0.36"	0.36"
Display height (SV)	0.24"	0.39"	0.56"	0.36"	0.36"

STATUS LED'S

: OP 1, 1 : Main Control Output
OP 2, 2 : Alarm 1 Status
OP 3, 3 : Alarm 2 Status
S : Soak Timer
T : Tuning Status
D : Digital Input

2. INPUT

Sensor input : TC:J,K,R,S,N,T,B & RTD: Pt-100
Range : Refer below table.

Sensor Type	Range	Resolution	Accuracy
Fe-k(J) T/C	0 ~ 760°C	1 °C	± 1 °C
Cr-AL(K) T/C	-99 ~ 1300°C	1 °C	
(R) T/C	0 ~ 1700°C	1 °C	
(S) T/C	0 ~ 1700°C	1 °C	
TC - N	-99 ~ 1300°C	1 °C	
TC - T	-99 ~ 400°C	1 °C	
TC - B	0 ~ 1800°C	1 °C	
Pt-100(RTD)	-100 ~ 450°C	1 °C	
Pt-100(RTD 0.1)	-99.9 ~ 450.0°C	0.1 °C	± 0.3 °C

Sampling Time : 125 msec.
Resolution : 1°C/0.1°C(Only for RTD)
CJC for TC : Built in automatic
LWC for Pt-100 : Built in upto 18E max.
Digital Filter : 1 to 10 Sec.

3. RELAY OUTPUT

Contact type : N/O, CM, N/C
Contact Rating : 5A @ 250VAC or 30 VDC
Life expectancy : > 5,00,000 operations
Isolation : Inherent

4. SSR DRIVE OUTPUT

Drive Capacity : 12V @ 30mA.
Isolation : Non-Isolated.

5. FUNCTION

Output 1 : Main Control output
Output 2 : Programmable
1) Auxiliary control
2) Alarm
3) Soak timer
4) Alarm + Soak timer
Control Action : ON-OFF/PID (Select)
Control Mode : Heat/Cool (Select)

6. ENVIRONMENTAL

Operating Range : 0 ~50°C, 5~90% Rh
Storage Humidity : 95% Rh (Non-condensing)

7. POWER SUPPLY

Supply Voltage : 90~270VAC, 50/60Hz.
Consumption : 4W Maximum.

8. PHYSICAL

Housing : ABS Plastic

SAFETY INSTRUCTION :

This controller is meant for temperature control applications. It is important to read the manual prior to installing or commissioning of controller. All safety related instruction appearing in this manual must be followed to ensure safety of the operating personnel as well as the instrument.

GENERAL

- ❖ The controller must be configured correctly for intended operation. Incorrect configuration could result in damage to the equipment or the process under control or it may lead personnel injury.
- ❖ The controller is generally part of control panel and in such a case the terminals should not remain accessible to the user after installation.

MECHANICAL

- ❖ The Controller in its installed state must not come in close proximity to any corrosive/combustible gases, caustic vapours, oils, steam or any other process by-products.
- ❖ The Controller in its installed state should not be exposed to carbon dust, salt air, direct sunlight or radiant heat.
- ❖ Ambient temperature and relative humidity surrounding the controller must not exceed the maximum specified limit for proper operation of the controller.
- ❖ The controller in its installed state must be protected against excessive electrostatic or electromagnetic interferences. Ventilation holes provided on the chassis of the instrument are meant for thermal dissipation hence should not be obstructed in the panel.

ELECTRICAL

- ❖ The controller must be wired as per wiring diagram & it must comply with local electrical regulation.
- ❖ Care must be taken not to connect AC supplies to low voltage sensor input.
- ❖ Circuit breaker or mains s/w with fuse (275V/1A) must be installed between power supply and supply terminals to protect the controller from any possible damage due to high voltage surges of extended duration.
- ❖ Circuit breaker and appropriate fuses must be used for driving high voltage loads to protect the controller from any possible damage due to short circuit on loads.
- ❖ To minimize pickup of electrical noise, the wiring for low voltage DC and sensor input must be routed away from high current power cables. Where it is impractical to do this, use shielded ground at both ends.
- ❖ The controller should not be wired to a 3-Phase supply with unearthed star connection. Under fault condition such supply could rise above 264 VAC which will damage the controller.
- ❖ The Electrical noise generated by switching inductive loads might create momentary Fluctuation in display, alarm latch up, data loss or permanent damage to the instrument. To reduce this use snubber circuit across the load.
- ❖ It is essential to install a over Temp. Protection device to avoid any failure of heating system. Apart from spoiling the product, this could damage the process being controlled.

PROGRAMMING



Press and Hold SET & UP Key Simultaneously for 3 Sec.

A

Press and Hold SET & DOWN Key Simultaneously for 3 Sec.

Press & Hold Shift Key for 3 Sec. in Run Mode

Press SET Key Once in Run Mode

Configuration			
Display	Default	Parameter Name	Range
LOCK	15	Lock Code	1 ~ 9999
INPT	J	Input Type	J, K, R, S, N, T, B RTD, RTD.1
LSPL	0	Lower Set Point Limit	Ref Table 1
HSPL	400	Higher Set Point Limit	Ref Table 1
OFFSE	0	Process Value Offset	-25 ~ 25 -25.0 ~ 25.0 (RTD.1)
FLTR	5	Input Filter	1 ~ 10
mode	PID	Control Mode	PID, On-Off
OPIL	HEAT	Control Logic	Heat, Cool, HT.CL
OCp	dsbl	Overshoot Control Point	0 ~ 100
rRtE	Enbl	Ramp Rate	Enable, Disable
tunE	Enbl	Auto tTune	Enable, Disable
SP	Enbl	Setpoint 1	Enable, Disable
OP2n	Enbl	Output 2 Mode	Enable, Disable
OP2C	150	Output 2 Control	00.0 ~ 40.0 °C
OP2	AUCn	Output 2 Function	None, Aux, Alarm
SP2	AbS	Setpoint 2	Absolute, Deviation
OP2L	HEAT	Output 2 Logic	Heat, Cool
SP2	Enbl	Setpoint 2	Enable, Disable
ALtY	LOy	Alarm Type	Low, High, LO.DV HI.DV, Band
ALLG	dIr	Alarm Logic	Direct, Reverse

Configuration			
Display	Default	Parameter Name	Range
ALIH	n0	Alarm Inhibit	Yes, No
ALAR	AUt0	Alarm ACK.	Auto, Manual, Both
ALSP	Enbl	Alarm Setpoint	Enable, Disable
OP3	AUCn	Output 3 Function	None, Aux, Alarm, Soak, AL.ST
SP3	AbS	Setpoint 3	Absolute, Deviation
OP3L	HEAT	Output Logic 3	Heat, Cool
SP3	Enbl	Setpoint 3	Enable, Disable
AL2Y	LOy	Alarm 2 Type	Low, High, LO.DV HI.DV, Band
AL2LG	dIr	Alarm 2 Logic	Direct, Reverse
AL2IH	n0	Alarm 2 Inhibit	Yes, No
AL2AR	AUt0	Alarm 2 ACK.	Auto, Manual, Both
AL2SP	Enbl	Alarm 2 Set Point	Enable, Disable
SOES	both	End Of Soak Strategy	None, H.off, AI.on, Both
SOtB	nnnn	Time Base Soak Timer	MM.SS, MMMM, HH.MM, HHHH
SOtdr	UP	Direction For Soak Time	Up, Down
SOtRS	YES	Reset Running Soak Time	Yes, No
SOtnd	nod2	Timer Start Mode	Mod1, Mod2, Mod3, Mod4
LdSP	SP1	Lower Display Message	Tog1, SP1, Timer
ULOC	15	User Lock Code	1 ~ 9999

Control List			
Display	Default	Parameter Name	Range
LOCK	15	Lock Code	1 ~ 9999
Pb	50	Proportional Band	0.5 ~ 99.9 °C
Int	240	Integral Time	0 ~ 3600 Sec.
dt	60	Derivative Time	0 ~ 300 Sec.
CYct	160	Cycle Time	1.0 ~ 100.0 Sec.
OUTL	1000	Output Power Limit	0.0 ~ 100.0 %
OPOF	dsbl	Output Off	0 ~ 10
EOFS	100	Tune Offset	50.0 ~ 100.0 %
HY1	2	Control Hysteresis	1 ~ 100 0.1 ~ 100.0 (RTD.1)
dLY1	0	Delay 1	0 ~ 500 Sec.
HY2	2	Hysteresis 2	1 ~ 100 0.1 ~ 100.0 (RTD.1)
dLY2	0	Delay 2	0 ~ 500 Sec.
HY3	2	Hysteresis 2	1 ~ 100 0.1 ~ 100.0 (RTD.1)
dLY3	0	Delay 3	0 ~ 500 Sec.
GAP1	00	Gap 1	-9.9 ~ 9.9 °C
GAP2	00	Gap 2	-9.9 ~ 9.9 °C
SOtdL	10	Soak Time Delay	0 ~ 99 °C
SOtdB	00	Soak Band	0.0 ~ 99 °C

User List			
Display	Default	Parameter Name	Range
SP1	0	Control Setpoint	LSPL ~ HSPL
SP2	0	Setpoint 2	LSPL ~ HSPL
SP3	0	Setpoint 3	LSPL ~ HSPL
rRtE	50	Ramp Rate	0.0 ~ 25.0 °C
OP2n	AUt0	OP2 Mode	On, Off, Auto
ALSP	0	Alarm Set Point	LSPL ~ HSPL 2 ~ 99 °C
AL2SP	0030	Alarm 2 Set Point	LSPL ~ HSPL 2 ~ 99 °C
SOttn	0030	Soak Time	1 Sec ~ 9999 Hrs.
min	30	Minute Elapsed	—


Auto Tunning Mode			
Display	Default	Parameter Name	Range
At	n0	Auto Tunning Mode	Yes, No

Parameter will display according to below symbols	
⚙️	Control Mode = PID
■	Control Mode = ON-OFF
▶	Control Logic is Heat - Cool
◆	OP2 = Auxiliary
★	OP2 = Alarm & Alarm Soak
★	OP3 = Auxiliary
⊗	OP3 = Alarm & Alarm Soak
●	OP2 = Soak & Alarm Soak
▲	Rate is Enable


A

OVER ALL DIMENSIONS & PANEL CUT OUT (IN MM)

MODEL:-AI-7483/7783/7983

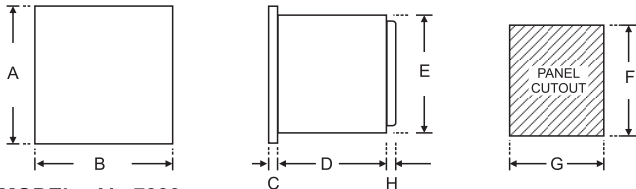

MODEL : AI - 7883



MODEL : AI - 7683

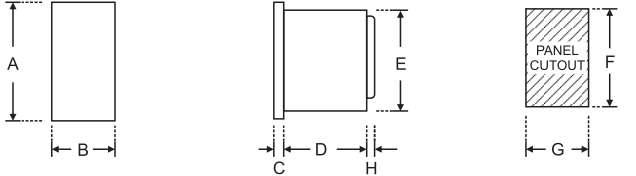


TABLE : 1


Dim Model	A	B	C	D	E	F	G	H
AI-7483	48	48	8	75	43	44	44	9
AI-7783	72	72	10	65	66	68	68	9
AI-7983	96	96	10	45	89	92	92	9
AI-7683	96	48	10	45	89	92	44	9
AI-7883	48	96	10	45	43	44	92	9

INSTALLATION GUIDELINES :


1. Prepare the cut-out with proper dimension as shown in figure.
2. Remove clamp from controller
3. Push the controller through panel cut-out and secure the controller in its place by tightening the side clamp.

ELECTRICAL INSTALLATION

The electrical connection diagram is shown on the controller enclosure as below.

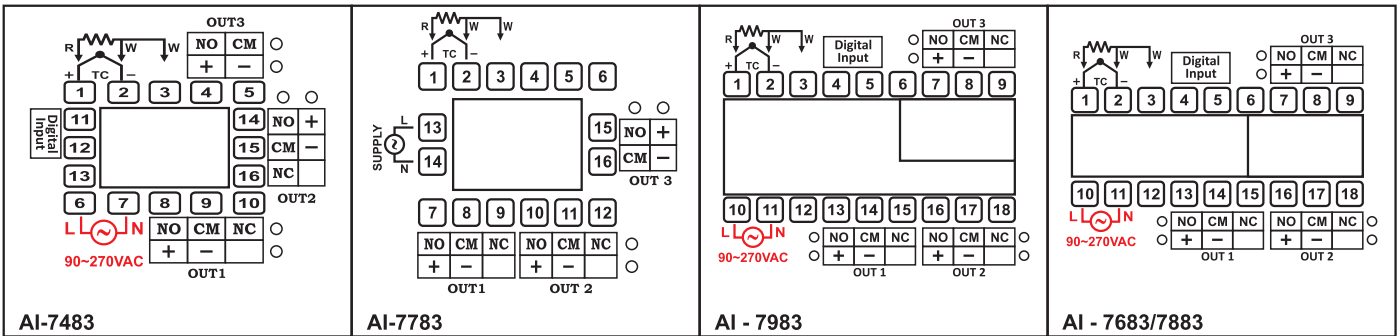

FRONT PANEL LAYOUT

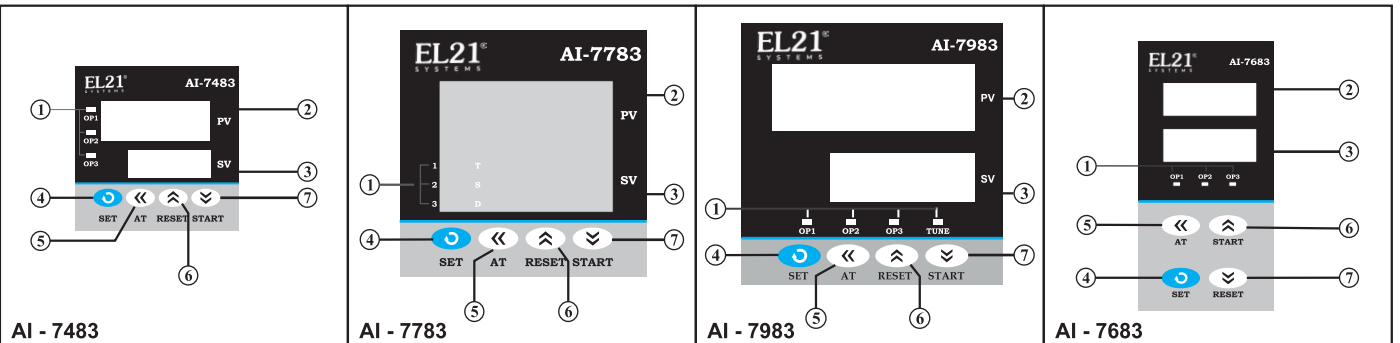

FRONT PANEL LAYOUT DESCRIPTION :

Sr.	NAME	FUNCTION
1	OP1 LED	Glows when OP1 is ON & flashes when delay time (dly1) is in operation (if selected mode is ON-OFF)
	OP2 LED	Glows when OP2 is ON & flashes when alarm1 condition persists even after acknowledged OR delay time (dly2) is in operation & selected mode is ON-OFF.
	OP3 LED	Glows when OP3 is ON & flashes when alarm2 condition persists even after acknowledged OR delay time (dly3) is in operation & selected mode is ON-OFF.
	T LED	Flashes when instrument tuning mode.
	S LED	Glows when Soak mode is selected & flashes when soak timer is in operation.
	D LED	Glows when Digital Input is open.
2	UPPER DISPLAY	It will display (1) Measured value of selected input or Error messages in run mode. (2) Parameters value in program mode.
3	LOWER DISPLAY	It will display (1) SP (Main set point) / SP2 and SP3 (Auxiliary/Alarm) set value / Set Soak time value/ balance or elapsed soak time in run mode. (2) Parameter code in program mode.

